



## **CPWplus** Weighing Scales

The CPWplus series of scales offers an extensive range of models and configurations to accommodate a variety of applications. Choose the basic CPWplus for compact portability, the -M or -L for large platforms. Simple operation, a selection of platform sizes, battery and AC operation, and rugged construction all combine to make the CPWplus truly a great value in this industrial range.



# CPWplus Weighing Scales


## Features

- Vivid, backlit LCD easily visible in any lighting conditions
- Programmable backlight can be set to "always on", "always off" or "light only when weighing"
- Colour-coded keys facilitate quick recognition of the most frequently used buttons
- Large, grade 304 stainless steel pan allows easy cleaning
- Lightweight design simplifies transport and portability
- Rugged construction stands up to industrial use
- Splash-proof housing, keypad and display mean easy cleaning and peace of mind
- Wall-mount bracket for placing indicator on vertical surface
- Auto power-off to save energy
- External calibration allows for verification and adjustment with weights
- Hold function freezes the displayed weight, allowing time to lapse without losing the result
- Selectable digital filtering helps minimise effects of vibration and disturbances
- Zero-tracking feature ensures display returns to zero reading


## Applications

- Weighing
- Display hold


Model	CPWplus 6	CPWplus 15	CPWplus 35	CPWplus 75	CPWplus 150	CPWplus 200	
			CPWplus 35M	CPWplus 75M	CPWplus 150M	CPWplus 200M	
			CPWplus 35L	CPWplus 75L	CPWplus 150L	CPWplus 200L	CPWplus 300L
<b>Capacity</b>	6kg	15kg	35kg	75kg	150kg	200kg	300kg
<b>Readability</b>	0.002kg	0.005kg	0.01kg	0.02kg	0.05kg	0.05kg	0.1kg
<b>Repeatability (S.D.)</b>	2g	5g	10g	20g	50g	50g	100g
<b>Linearity (+/-)</b>	4g	10g	20g	40g	100g	100g	200g
<b>Tare Range</b>	Full range						
<b>Pan Size</b>			300x300mm	500x500mm (M)	900x600mm (L)		
<b>Weighing Units</b>	kg, lb, lb:oz, oz						
<b>Stabilisation Time (sec)</b>	2						
<b>Interface</b>	RS-232						
<b>Calibration</b>	External calibration						
<b>Display</b>	Backlit LCD with 22mm-high digits						
<b>Power Supply</b>	12VAC 150mA adapter / 6 x AA batteries 12VDC 500mA adapter / Internal rechargeable battery (M & L)						
<b>Operating Temperature</b>	0° to 40°C						
<b>Housing</b>	Extruded aluminum						
<b>Overall Dim.</b>			300x300x50mm	500x500x40mm (M)	900x600x80mm (L)		
<b>Net Weight</b>			4.00kg	8.90kg (M)	14.40kg (L)		

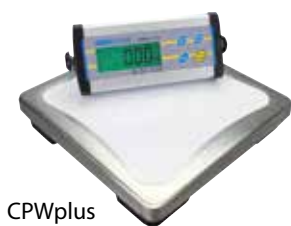

CPWplus

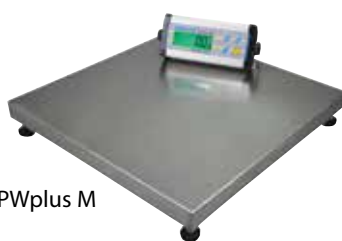

CPWplus M

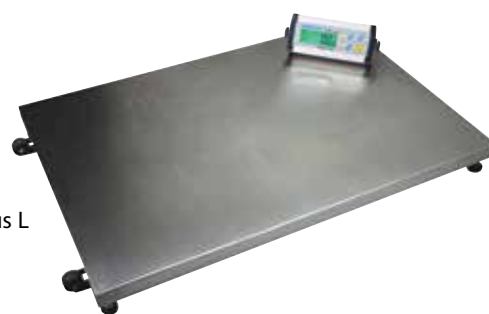

CPWplus L

With more than forty years of experience in the production of balances and scales, professionals worldwide rely on Adam for feature-rich, quality products with best-in-class value - The right balance of speed, performance and value.

## Accessories

- 700100099 Hard carrying case w/lock (CPWplus only)
- 1120011156 ATP Adam thermal printer
- 3126011263 ATP printer paper
- 3126011281 ATP printer paper (pack of 10)
- 700200059 Non-slip rubber mat (CPWplus L only)
- 3074010266 RS-232 cable (null-modem)
- 3074010507 RS-232 to USB adapter (must order corresponding RS-232 cable)
- 600002028 Adam DU data collection program

Supplied by: